


# Security/Home Automation Remote

The Security/Home Automation Remote Control combines the features of security remotes with the features of Home Automation Remotes. It lets you arm and disarm the X10 Security System in HOME and AWAY modes. It has SECURITY LIGHT ON and OFF buttons which work like the LIGHT ON and LIGHT OFF buttons on X10 Keychain Remotes. It also lets you control up to four additional X10 Modules and dim and brighten lights too!

## Installing the Remote

1. Set the code wheel on the Remote to the same House Code as the Security Console.
2. Fit four AAA Alkaline batteries in the battery compartment in the back of the remote. Observe + and - marks.
3. Set the slide switch on the Security Console to INSTALL.
4. Press ARM on the Remote. The Console beeps once to confirm that the Remote has been registered.
5. Return the Console's slide switch to the RUN position.

*Note: If the remote did not register, remove the label on the front and use a pencil or other pointed object to press the small CODE button to generate a new random code. Press ARM again to install the Remote.*

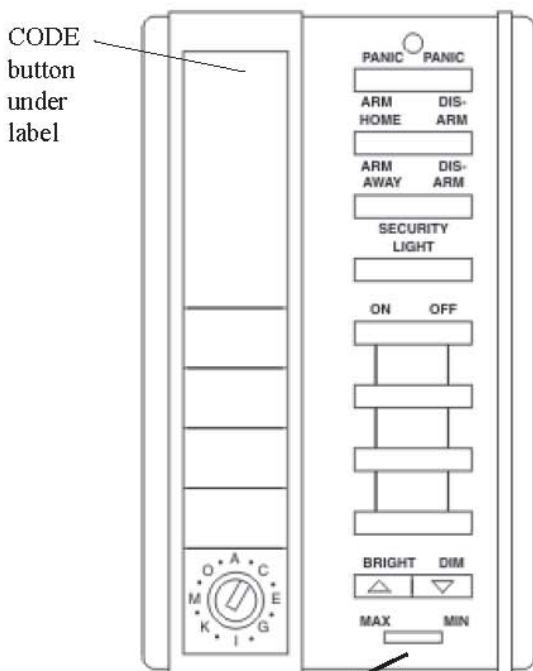

## Operation

The MIN/MAX switch on the Remote lets you set it to arm the system with or without an exit/entry delay.

When set to MIN everything in the system will arm and trip instantly.

When set to MAX Motion Sensors will still trigger the alarm instantly, but Door/Window Sensors (that's you've set to MAX) will have a 1 minute exit and 30 sec. entry delay.

## ARM HOME/ARM AWAY

The Remote lets you arm the system with or without Motion Sensors being armed.

Press ARM AWAY on the Remote Control to arm all Door/Window Sensors AND Motion Sensors.

Press ARM HOME on the Remote Control to arm ONLY Door/Window Sensors. Motion Sensors will NOT be armed. This lets you arm the system at night without accidentally tripping the system yourself when you move around your home.

## Sounding the PANIC Alarm

Triggering the panic alarm trips the alarm but will not cause the system to dial out unless you arm the system first.

Press PANIC on the Remote.

Press DISARM to cancel the alarm.

## Controlling X10 Modules

Use the 4 ON-OFF buttons to control X10 Modules set to codes 1, 2, 3, and 4 and to the same Housecode as the Remote and Security Console. Then press Bright or Dim to brighten/dim lights connected to Lamp or Wall Switch Modules.

## Replacing batteries

Use four AAA alkaline batteries. Observe + and - marks. After replacing batteries, the following steps are necessary to determine that the Console still recognizes the Remote Control.

1. Place the Console's slide switch to RUN.
2. Press ARM on the Remote Control. If the system arms, the Console recognized the Remote Control and no further action is necessary. If the system did not arm: Repeat "Installing the Remote" as described above.

**F.C.C. CAUTION - THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:**  
 (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

**NOTE: NO CHANGES OR MODIFICATIONS MAY BE MADE TO THE UNITS. ANY CHANGES MADE TO THE UNITS WILL VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.**

**120 DAY LIMITED WARRANTY x10.com (X10), a division of Authinx Inc., warrants this product to be free from defective material and workmanship for a period of 120 days from the original date of purchase at retail. X10 agrees to repair or replace, at its sole discretion, a defective product if returned to X10 within the warranty period and with proof of purchase. If service is required under this warranty:**

**Call 1-888-384-0969, visit [www.x10.com](http://www.x10.com), or email [support@x10.com](mailto:support@x10.com)**